

ZONES: 200
 A/C NUMBER:
 REV. DATE: 11/01/07
 FREQUENCY: 1C

W/C NUMBER: 321F3101 DATE:

REFERENCES

AMM 24-22-00

MECH INSP

MPD ITEM: 31-010-00

SYSTEMS

FUNCTIONAL CHECK OF THE AURAL WARNING MODULE (AWM) USING BITE CHECK.

A. References

- (1) AMM TASK 24-22-00-860-811 p201, Supply Electrical Power
- (2) AMM TASK 24-22-00-860-812 p201, Remove Electrical Power

TASK 31-51-00-740-801

XXXXX 1. Aural Warning Module BITE Test

A. Procedure

- (1) Do this task: Supply Electrical Power (AMM TASK 24-22-00-860-811 p201).
- (2) Make sure that this circuit breaker is closed:
 - (a) Circuit Breaker Panel, P6-3:
 - 1) 6D18 LANDING GEAR AURAL WARN
- (3) Do the channel A BITE test as follows:
 - (a) Turn and hold the ROTATE TO TEST switch on top of the aural warning module to the A position.
 - 1) Make sure you hear the intermittent horn.
 - (b) Release the ROTATE TO TEST switch.
 - 1) Make sure you hear the clacker for approximately 5 seconds.
- (4) Do the channel B BITE test as follows:

(a) Turn and hold the ROTATE TO TEST switch on top of the aural warning module to the B position.

1) Make sure you hear the intermittent horn.

(b) Release the ROTATE TO TEST switch.

1) Make sure you hear the clacker for approximately 5 seconds.

B. Put the Airplane Back to Its Usual Condition

(1) Remove electrical power as required (AMM TASK 24-22-00-860-812 p201).

***** END OF WORKCARD *****