

ATA AIRLINES, INC.

LEFT ENGINE T/R FIRE SEAL

PAGE 1 / 1

CHECK BEING PERFORMED: Custom

ZONES: 400
A/C NUMBER:
REV. DATE: 01/30/03
FREQUENCY: 4A

W/C NUMBER: 341I7801 DATE:

PANELS

413 415
414 416

REFERENCES

FIGURES 1 AND 2, AMM 78-31-00, 78-31-12

MECH INSP

VISUALLY CHECK THE LEFT ENGINE T/R FIRE SEAL.

1. Fireseal Inspection - Visual Check (Figures 1 and 2).

_____ XXXXX A. Prepare for the Inspection

WARNING: DO THESE SPECIFIED TASKS IN THE CORRECT SEQUENCE BEFORE YOU OPEN THE THRUST REVERSER: RETRACT THE LEADING EDGE, DO THE DEACTIVATION PROCEDURES FOR THE LEADING EDGE AND THE THRUST REVERSER (FOR GROUND MAINTENANCE), AND OPEN THE FAN COWL PANELS. IF YOU DO NOT OBEY THE ABOVE SEQUENCE, INJURIES TO PERSONS AND DAMAGE TO EQUIPMENT CAN OCCUR.

(1) Do this task: Open the Thrust Reverser (Selection)
(AMM TASK 78-31-00-010-801-F00 p201).

_____ XXXXX B. Procedure

(1) Look for missing fireseal and for obvious damage.


(a) If you find damaged or missing fireseal, do this task: Fireseal Inspection (Detailed)
(AMM TASK 78-31-12-200-802-F00 p601).


_____ XXXXX C. Put the Airplane Back to Its Usual Condition

WARNING: OBEY THE INSTRUCTIONS IN THE PROCEDURE TO CLOSE THE THRUST REVERSERS. IF YOU DO NOT OBEY THE INSTRUCTIONS, INJURIES TO PERSONS AND DAMAGE TO EQUIPMENT CAN OCCUR.

(1) Do this task: Close the Thrust Reverser (Selection)
(AMM TASK 78-31-00-010-804-F00 p201).

*****END OF WORKCARD*****

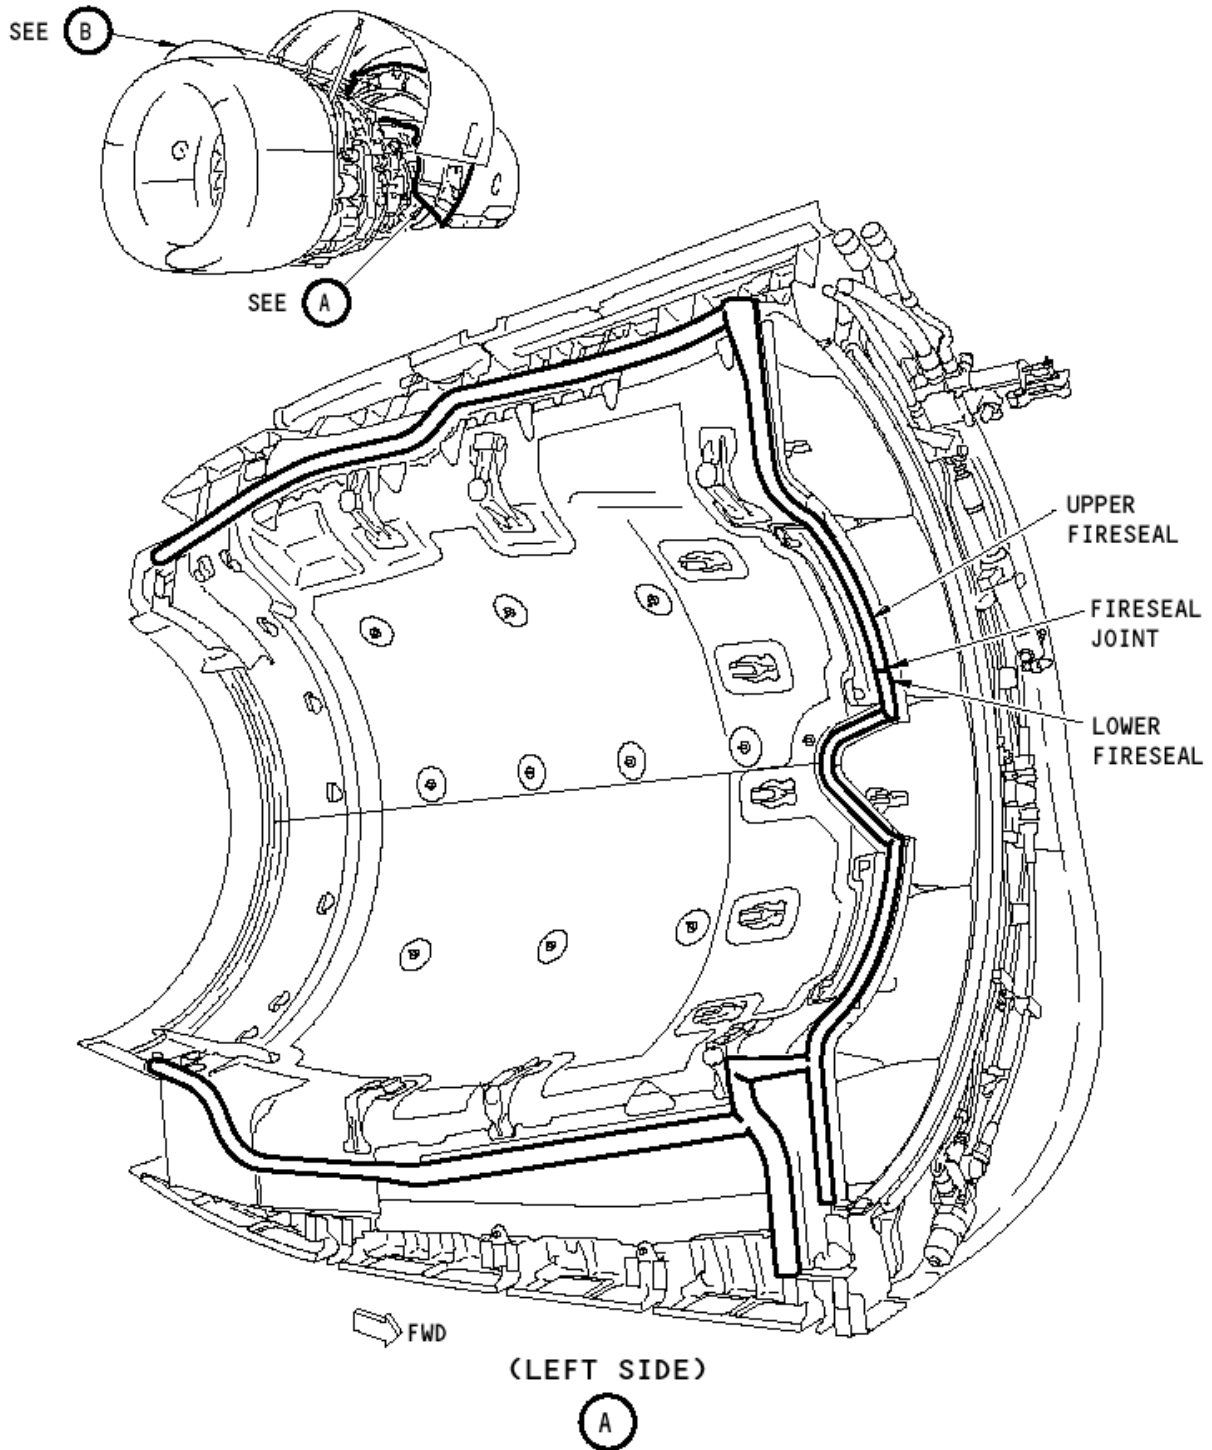

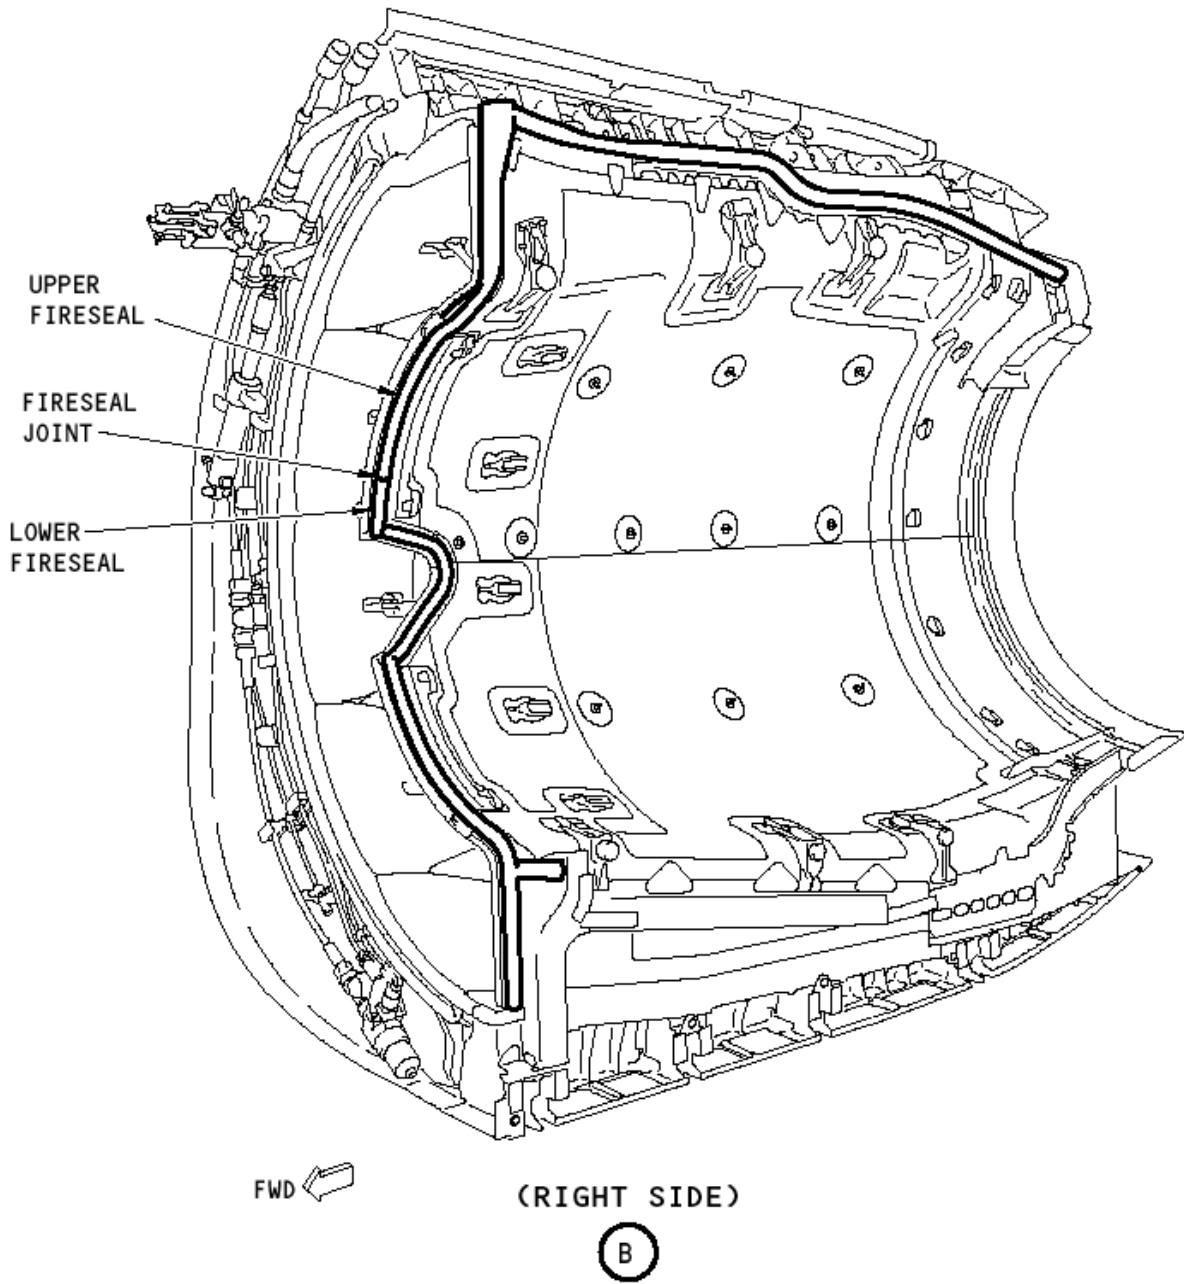

Right Reverser Half
Fireseals

FIGURE 2