

ATA AIRLINES, INC.

LAV WASTE COMPARTMENT FIRE EXTINGUISHERS

PAGE 1 / 1

CHECK BEING PERFORMED: Custom

ZONES: 200
A/C NUMBER:
REV. DATE: 04/21/99
FREQUENCY: 1C

W/C NUMBER: 223M2601 DATE:
W/O:
JAC CODE:

REFERENCES

1

MECH INSP

VISUALLY CHECK LAVATORY WASTE COMPARTMENT TEMPERATURE INDICATOR OR FIRE EXTINGUISHER FUSIBLE TIPS FOR CONDITION.

1 Automatic Fire Extinguisher -
Temperature Indicator Inspection/Check

A Procedure


XXXXX _____ 1 Open the sink cabinet waste compartment door to access the temperature indicator mounted on the inside of the waste disposal chute.

XXXXX _____ 2 Make sure the temperature indicator is all gray instead of black.

XXXXX _____ 3 If one or more of the patches are black, replace the temperature indicator and make a check of the bottle for melted fusible tips. If the fusible tips are melted, the bottle has discharged.

XXXXX _____ 4 If the bottle has discharged, replace the bottle.

*****END OF WORKCARD*****

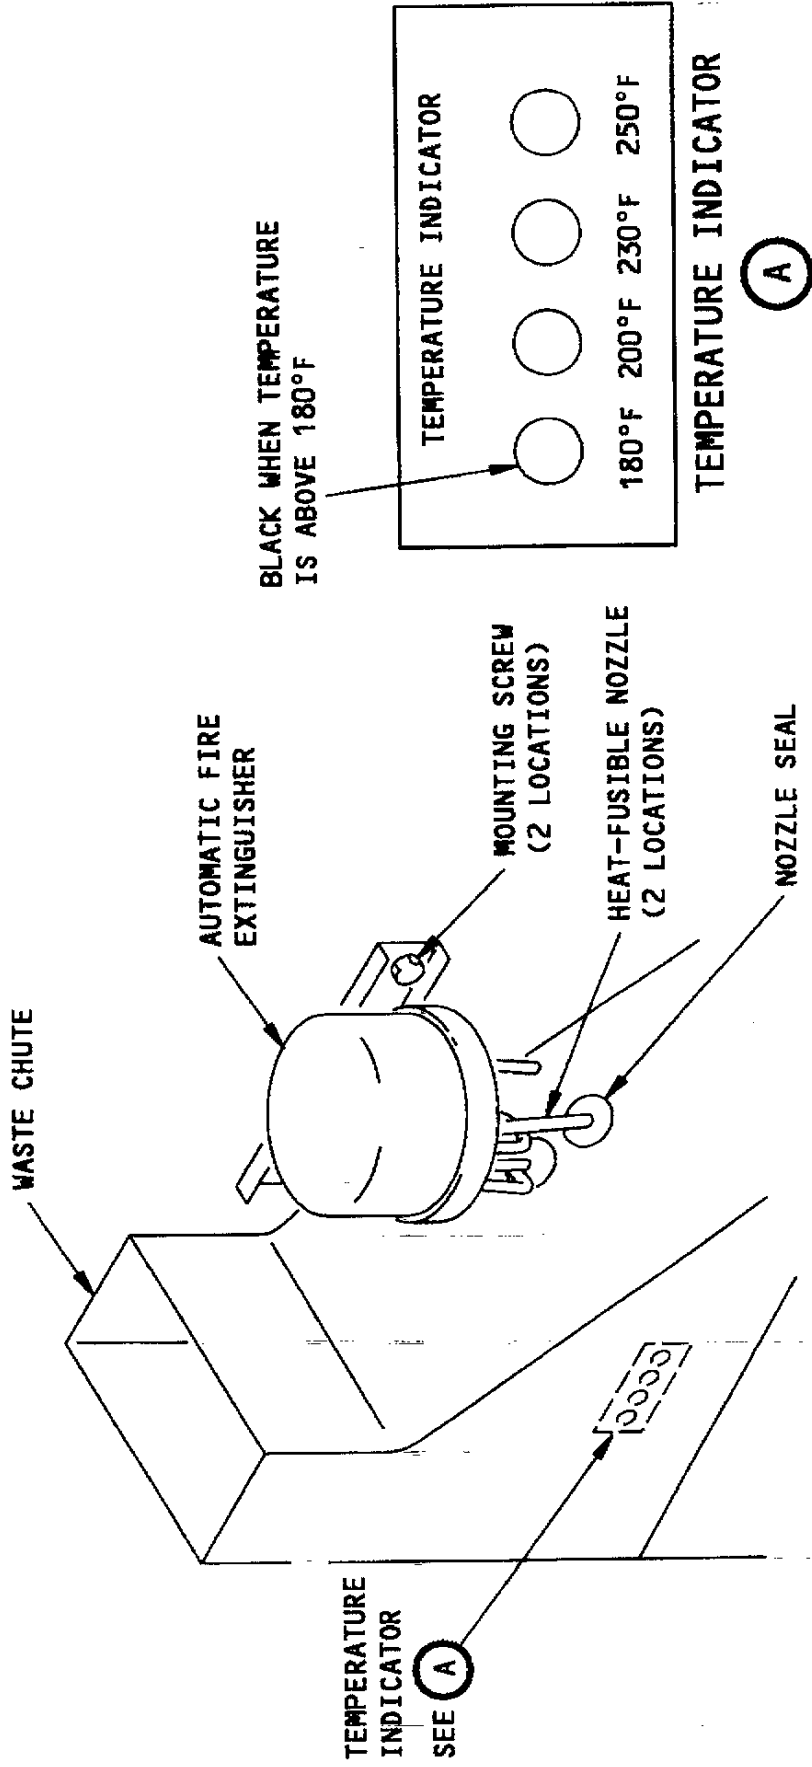

Automatic Fire Extinguisher - Installation

AUTOMATIC FIRE EXTINGUISHER

FIGURE 1

08/06/1998