

ATA AIRLINES, INC.

INSPECT CONTROL CABLES - AFT CARGO COMPARTMENT

PAGE 1 / 4

CHECK BEING PERFORMED: Custom

ZONES: 141 142 145 146 W/C NUMBER: 312I2001 DATE:

A/C NUMBER:

REV. DATE: 06/01/06

FREQUENCY: 3C

MFR P/N	DESCRIPTION	QTY
BMS3-33	Grease, Aircraft General Purpose	A/R

PANELS

822	141ZBC	141ZDC	142ZBC	142ZDC	142ZFC	142ZHC
142ZKC	142QW	142SW	142UW	142XW		
141ZAC	141ZCC	142ZAC	142ZCC	142ZEC	142ZGC	142ZJC
141TW	142RW	142TW	142VW			

REFERENCES

Figure 1

MECH	INSP
-------------	-------------

MPD Item: 27-228-00

NOTE: This task includes Cables of: Rudder Control, Elevator Control, and Stabilizer Control located within the aft cargo compartment and the aft cargo compartment equipment bay.

NOTE: The control cable system must be displaced full travel in each direction for cleaning, lubricating, and complete inspection at seals, pulleys, and fairlead areas.

_____ XXXXX 1. Clean control cables for the inspection.

CAUTION: DO NOT USE HEAT TO THIN THE GREASE. DO NOT USE SOLVENT. DO NOT APPLY OR SPRAY BMS 3-23 ON THE CONTROL CABLES.

A. Use a clean, dry, lint-free cloth to remove the old grease and dirt from the surface of the control cable.

(1) Clean the control cable for the full length of the cable for the full length of travel through fairleads, air pressure seals, over pulleys, quadrants, and drums.

_____ XXXXX 2. Lubricate control cables where lubricant is removed.

NOTE: Do not lubricate stainless steel (CRES) control cables.

A. Apply a light even coat of grease, BMS3-33 to the cable for the full length of travel.

(1) Do not apply grease to these areas because they will

A/C NUMBER:

CHECK BEING PERFORMED: Cust

W/C NUMBER: 312I2001 (continued)

MECH: INSP:

receive grease during cable movement:

- (a) The clad areas.
- (b) Through the fairleads.
- (c) Through the air pressure seals.
- (d) On the pulleys.
- (e) On the quadrants.
- (f) On the drums.

B. Wipe the cable with a clean cloth to remove grease, but leave a thin visible film.

3. Inspection of the control cables (Fig. 1).

XXXXX _____ A. Perform a DI to make sure the cable does not contact parts other than pulleys, quadrants, cable seals, or grommets installed to control cable routing.

NOTE: The minimum cable clearance from other parts is 0.20 inches, except 0.10 inches within 10 inches of a pulley or quadrant.

(1) Look for evidence of contact with other parts.

XXXXX _____ B. Perform a DI of the cable runs for incorrect routing, kinks in the wire rope, or other damage.

(1) Cable assembly must be replaced if:

- (a) A wear pattern exists where the individual wires in a strand appear to blend together (one or more outer wire cross sections worn by more than 40 percent) (Fig. 1).
- (b) If a kink is found.
- (c) If corrosion is found.

A/C NUMBER:

CHECK BEING PERFORMED: Cust

W/C NUMBER: 312I2001 (continued)

MECH: INSP:

XXXXX _____ C. Perform a DI of the cable.

NOTE: To do a check for broken wires, rub a cloth along the cable. The cloth will catch on any broken wires.

(1) The 7X7 cable assembly must be replaced if:

(a) There are two or more broken wires in 12 continuous inches of cable.

(b) There are three or more broken wires anywhere in the total cable assembly.

(2) The 7X19 cable assembly must be replaced if:

(a) There are four or more broken wires in 12 continuous inches of cable.

(b) There are six or more broken wires anywhere in the total cable assembly.

(3) Make sure there is sufficient lubrication on the carbon steel control cables.

NOTE: Grease or oil should not be applied to stainless steel (CRES) control cables.

XXXXX _____ 4. Inspection of the Control Cable Fittings

A. Perform a DI to make sure the means of locking the joints are intact (wire locking, cotter pins, turnbuckle clips, etc.).

(1) Missing parts must be replaced.

B. Perform a DI of the swaged portions of swaged end fittings for surface cracks or corrosion.

(1) Cable assembly must be replaced if:

(a) Cracks are visible.

(b) Corrosion is present.

A/C NUMBER:

CHECK BEING PERFORMED: Cust

W/C NUMBER: 312I2001 (continued)

MECH: INSP:

C. Perform a DI of the unswaged portion of the end fitting.

(1) Cable assembly must be replaced if:

(a) Cracks are visible.

(b) Corrosion is present.

(c) End fitting is bent more than 2 degrees.

D. Perform a DI of the turnbuckle.


(1) Turnbuckle must be replaced if:

(a) Cracks are visible.

(b) Corrosion is present.

XXXXX _____ 5. Check associated pulleys and brackets for condition and security of installation.

*****END OF WORKCARD*****

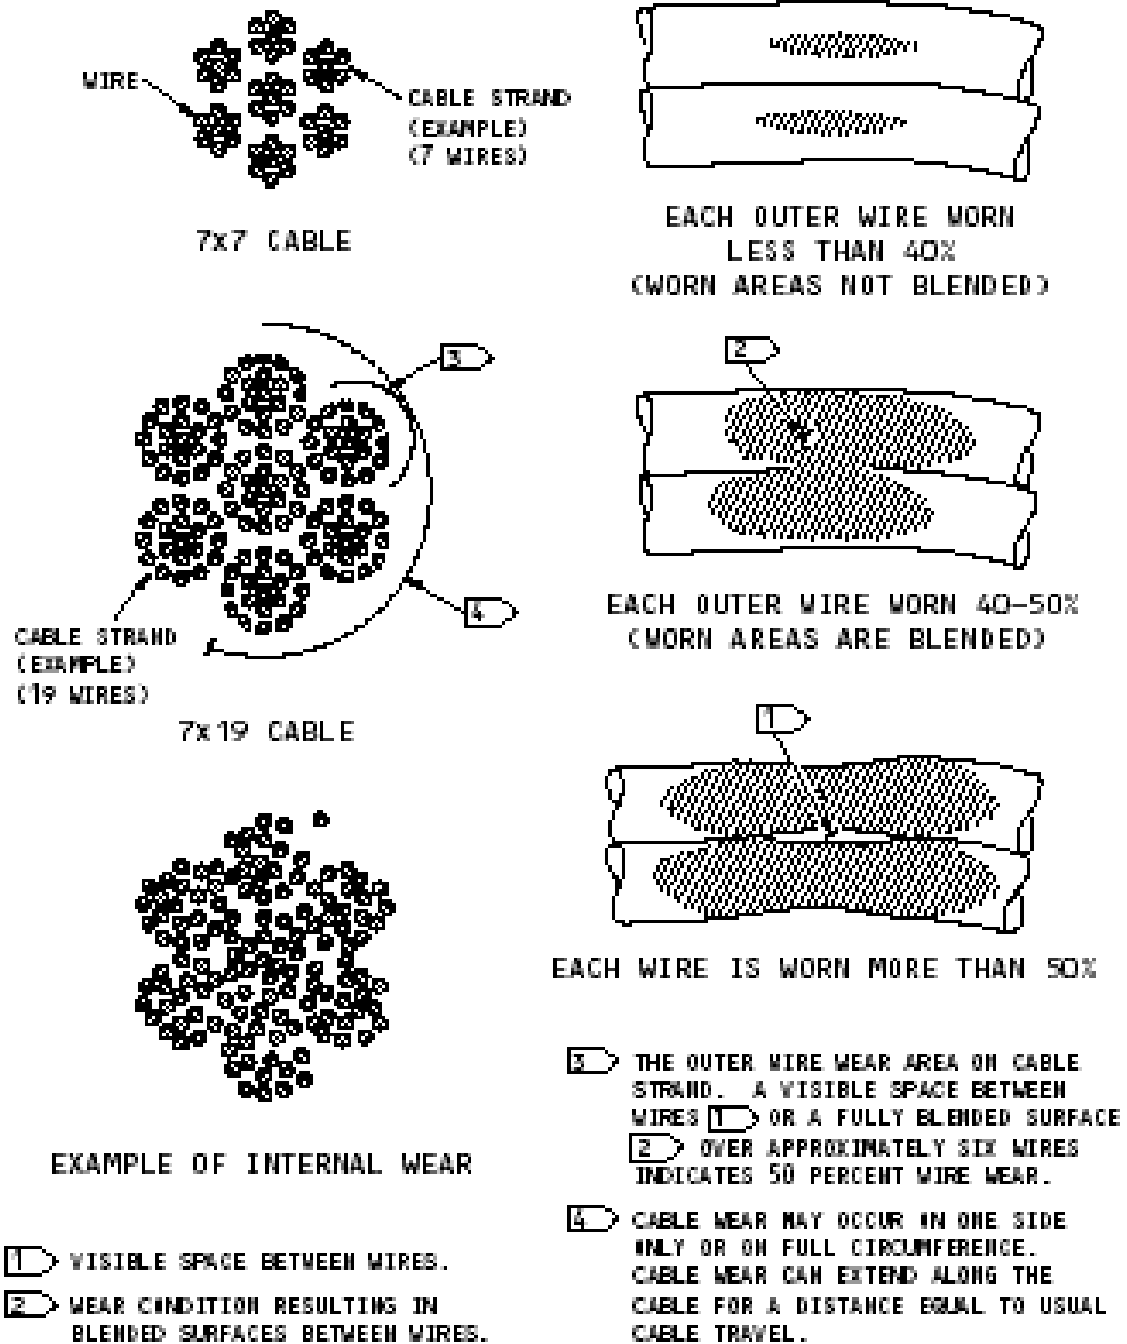

Cable Wear Patterns